

If you leave the SD card in the Nomad but have exited the program, the program should not start up merely because you power up the Nomad. It should only start when you click on the shortcut located in the Start menu. If powering up your Nomad causes the program to start, try updating the firmware by following the instructions below.

The current OS Firmware is 1.2.2 which can be downloaded from this link:

<http://www.trimble.com/Outdoor-Rugged-Computers/nomad.aspx?dtID=support>

Select “Nomad Downloads”

Select “Nomad 900 series (Windows Mobile 6.1) Firmware”

Select “Nomad Series - Windows Mobile 6.1 - Firmware version 1.2.2 - Language Provisioning”
(Follow the instructions to install the firmware)

Version 1.2.2 contains the Autorun patch.